

REGAL



Breadmaker Guide & Cookbook

Models No. K6750 & C6750

I *Introduction*

Welcome to machine breadmaking! Now you can enjoy the homemade goodness of freshly baked bread without the time consuming mixing and kneading. And, there are no sticky bowls or floured boards to clean. The breadmaker does all the work for you in just one pan.

Before you start, please read the instructions and make certain you have all the proper measuring tools on hand. Although the machine does the work, you still have to do your part by using the correct ingredients and measuring accurately. . . using a soup spoon in place of a measuring spoon practically guarantees a failure. Other factors, such as the temperature of the ingredients and humidity can also affect the finished loaf. Even the brand of flour or yeast may alter the end result. Keep in mind, breadmaking is not a beauty contest. Even the not-so-perfect loaves are often quite tasty. Your next loaf will probably be even better.

During our extensive testing and recipe development we simulated some less-than-ideal conditions and have attempted to tell you how to compensate for them. We've shared that information with you under "Ingredients Substitutions and Tips." We know you'll find this added information useful and we encourage you to read it thoroughly and refer to it often, especially when making a recipe for the first time, or altering a recipe.

If there are three (or fewer) people in your household, you'll probably want to make the smaller size loaf when possible, so it doesn't get stale before you finish it. And, with the Regal Breadmaker it's so easy to make fresh bread almost any time. Warm, homemade bread is a thoughtful gift for a friend who needs a "day brightener," or for a new neighbor. But be prepared - they'll want more!

Homemade bread is great -- and, making it in the Regal Breadmaker is great fun!

Power Interruption

If the breadmaker is accidentally unplugged, or in the event of a power outage, the breadmaker will automatically resume operation if the power comes on again within 10 minutes of the interruption.

When you cannot determine how long the power has been off, discard ingredients and start over.

Table of Contents

	Page
Introduction	2
Power Interruption	3
Important Safeguards	5
Description of Parts	6
Caution for Use and Safety	7
Settings	8-9
Cycle Times	9
Display Information	10
Control Panel	11-12
Breadmaking	15-21
Tips for Breadmaking	13
Ingredients Substitutions and Tips	14-15
Recipe Conversions	15
High Altitude Adjustments	16
Adjusting Recipes	17-18
Sources For Unusual Ingredients	18
Operating Instructions, Bread Settings	19-21
To Clean Breadmaker	22
To Use Timer	23
Bread Recipes	24-31
Making Dough.	32-43
Using the Automatic Dough Setting.	32-33
Crust Treatments.	34-35
Rising, Freezing, Storing.	36-37
Recipes for Doughs	38-43
Recipes for Quick Breads.	43-44
Making Pasta.	45
Pasta Recipes	45
Making Jam	46
Jam/Marmalade Recipes	46-47
Making Rice.	48

Before Using Your Breadmaker

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should include the following:


1. READ ALL INSTRUCTIONS.
2. To protect against electrical hazards, do not immerse cord, plug or appliance in water or other liquids.
3. Do not touch hot surfaces. Use handles or knobs. Always use pot holders or oven mitts to handle hot bread pan or hot bread.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
6. Avoid contacting moving parts.
7. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
8. Do not use attachments not recommended or sold by the appliance manufacturer. This may cause fire, electrical shock or injury.
9. Do not use outdoors.
10. Do not let cord hang over edge of table or counter, or touch hot surfaces.
11. Do not place appliance on or near a hot gas or electric burner or in a heated oven.
12. To disconnect, grip plug and pull from wall outlet. Never pull on the cord.
13. Do not use appliance for other than its intended use.
14. This product is intended for household use only.

SAVE THESE INSTRUCTIONS

To reduce the hazard of potential shock, this item has a polarized plug (one blade is wider than the other), which will fit only one way in a polarized outlet. If the plug does not fit the outlet properly, turn the plug the other way; if it still does not fit, contact a qualified electrician for assistance. Never use this plug with an extension cord unless it fits properly. **DO NOT ATTEMPT TO DEFEAT THIS SAFETY FEATURE.**

NOTICE: A short cord is provided to reduce the risks of becoming tangled in or tripping over a longer cord. Extension cords may be used if care is exercised in their use and the wattage rating is at least as great as the wattage stamped on the base of the appliance. If an extension cord is used, it should be arranged so that it will not drape over the counter or tabletop where it can be reached by children or tripped over accidentally.

Description of Parts

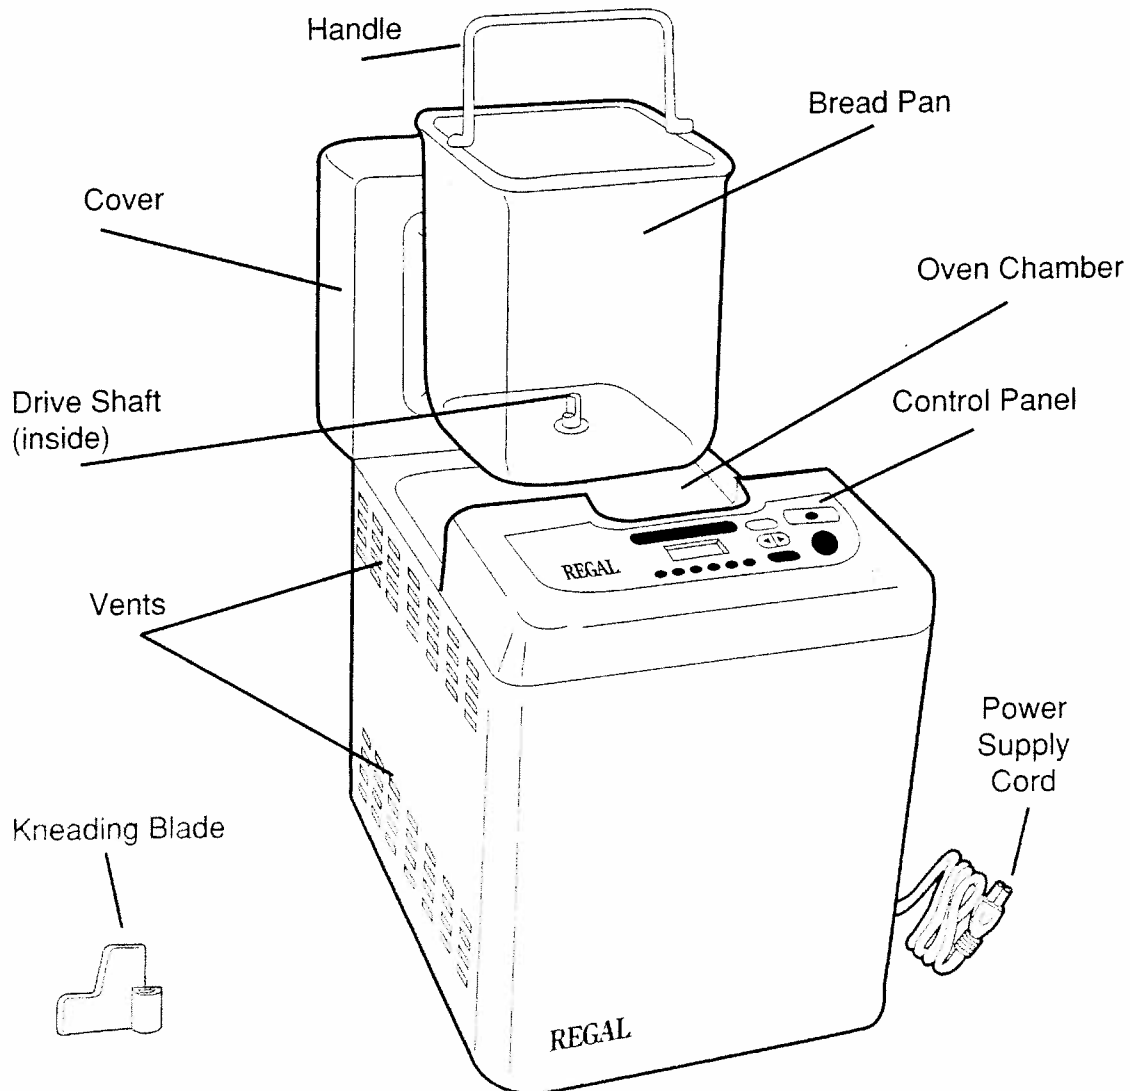

Caution for Use and Safety

Do not use breadmaker on a surface that is not heat resistant, or in an area that is exposed to direct sunlight.

Place the breadmaker to allow for 4 inches of clearance on all sides.

Plug it into a properly wired wall outlet (120 volts AC only). Keep the breadmaker away from babies and children. They might touch the control buttons and the breadmaker cover gets hot during operation.

Do not cover the breadmaker with anything during operation as this may cause a malfunction.

Do not open the lid unnecessarily or remove the dough during operation. The lid may be opened to add extra ingredients at the indicated time. Extra water or extra flour may be added during the first kneading cycle if dough appears too dry or too moist. (See page 17-18).

Do not touch cover of breadmaker during operation. It will be hot.

Do not dent or damage the bread pan. The breadmaker will not operate properly. Call the toll-free number on page 3 for replacement information.

Do not immerse the bread pan in water or wash it in a dishwasher. This could cause malfunction of the shaft, or rusting. To clean the outside of the pan, use a damp cloth.

Do not immerse the breadmaker, cord or plug in water at any time. This could cause an electrical shock or malfunction.

Settings

Six menu settings allow for making a wide range of breads, doughs, rice, jam, pasta, quick breads and more.

Basic This setting is probably used more often than any other because it gives the best results with almost any recipe; standard white bread, raisin bread and more. Total cycle time is 2 hours 40 minutes.

French This unique French setting produces a heartier crust. It includes a third rise cycle and bakes at a slightly higher temperature which is ideal for French or Italian breads. Total cycle time is 3 hours 30 minutes.

Rapid When you're in a hurry, the Rapid setting will make bread faster than other cycles. We suggest that you use the classic white bread recipe and increase the water by two tablespoons. This setting skips one of the three rising steps so it is quicker. Total cycle time is 1 hour 30 minutes. Note: this setting does not offer a fruit/nut signal.

Whole Wheat Offers longer rise cycles to accommodate the slower rising action for bread containing more than 50% whole wheat flour. Total cycle time is 3 hours 20 minutes.

Dough The Dough setting is used to prepare dough for rolls, specialty breads, pizza, pasta, etc., which are shaped by hand, allowed to rise a final time and then baked or cooked conventionally. Total cycle time is 1 hour 20 minutes. When cycle is complete, remove the dough and proceed with hand shaping, etc. (See instructions, Pages 32-44.)

Bake Only This setting is for baking doughs or batter breads (quick breads). Also use this cycle for making jams and rice. Total cycle time is 50 minutes.

Note:

The audible signal for adding raisins or other dried fruits applies to the following settings only: Basic, French, and Whole Wheat.

Cycle Times

CYCLE SETTINGS AND TIMES						
	Basic	French	Rapid	Whole Wheat	Dough	Bake
Primary Knead	10 min.	18 min.	14 min.	10 min.	20 min.	N/A
Primary Rise	20 min.	40 min.	N/A	25 min.	N/A	N/A
Secondary Knead	15 min.	22 min.	N/A	20 min.	N/A	N/A
Secondary Rise	30 min.	35 min.	N/A	50 min.	30 min.	N/A
Loaf Shaping	4 sec.	4 sec.	N/A	4 sec.	4 sec.	N/A
Final Rise	40 min.	45 min.	33 min.	45 min.	30 min.	N/A
Bake	45 min.	50 min.	43 min.	50 min.	N/A	50 min.
Total Cycle Time	2:40	3:30	1:30	3:20	1:20	50 min.
Keep Warm	60 min.	60 min.	60 min.	60 min.	60 min.	60 min.
Fruit/Nut Signal	yes	yes	no	yes	no	no
Min. from Start to Fruit/Nut Signal	40 min.	75 min.	N/A	50 min.	N/A	N/A
Time on Display	2:00	2:15	N/A	2:30	N/A	N/A

Display Information


You should always use the breadmaker in a room that is free of drafts, and is at least 55°F/13°C, but not warmer than 90°F/32°C. Do not use breadmaker in an unheated garage, outdoors, near a heat vent, or in direct sunlight. Generally the display window will tell you what is happening with your breadmaker. Here are some points to consider.

Message	Reason	Solution
H:HH Flashing	Oven chamber is too warm, above 100°F/38°C.	Open cover, remove bread pan and allow to cool with cover open. The unit will beep when cool enough to restart and 0:00 will appear on the display.
0:00	Cycle complete.	Press Stop button and unplug breadmaker.

Before Calling for Service

Problem	Possible Reasons
The unit does not operate after pushing the Start button.	<ul style="list-style-type: none"> ● Unplugged. ● Setting was not selected.
The bread rose too high or the bread didn't rise high enough.	<ul style="list-style-type: none"> ● Too much yeast, flour or moisture.

Control Panel

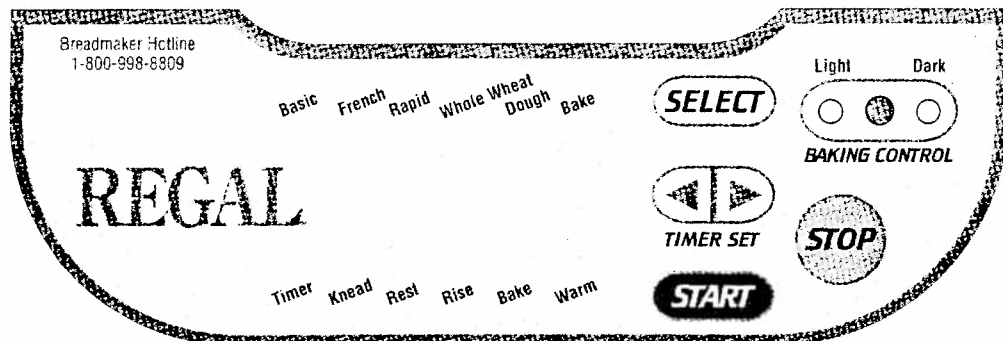

● STOP Button

Press the Stop Button to turn off the power after baking is completed and you are ready to remove the bread. Or, press Stop if you decide to reset the cycle or timer. To take effect, you must hold down for three seconds. You will hear a beep indicating contact has been made.

● SELECT Button

Press the Select button to choose the setting you desire. Each time you press the Select button, the setting will advance in the following sequence:

Basic French Rapid Whole Wheat Dough Bake

Note: a setting must be selected before the baking control (crust color) can be selected.

● BAKING CONTROL

The Baking Control is automatically preset for a medium crust setting. If you want a lighter or darker crust, press the Baking Control button until the indicator lights up the setting you want.

● TIMER Set Buttons

Press the < or > button to set the timer for delayed baking. Each time you press the > arrow you will advance the setting by 10 minutes. Each time you press the < arrow you will decrease the time setting by 10 minutes.

● START Button

Push to start the process of the selected setting or to start timer. The cycle time for each setting will appear on the display.

Setting	Cycle Time
Basic	2:40
French	3:30
Rapid	1:30
Whole Wheat	3:20
Dough	1:20
Bake	0:50

Timer Information

Before setting Timer, you must select desired setting. Then set the Timer for when you would like your bread finished.

- > Each time this button is pressed, the timer setting will advance 10 minutes.
- < Each time this button is pressed, the timer setting will go back 10 minutes.

If you go past the desired time, simply press the < button to go back to desired time. If you hold the buttons down they will advance or reverse times quickly.

Note: Not all recipes are suitable for delayed baking because ingredients like fresh milk or eggs could spoil.

You can set the delay bake for 10 minutes longer than the selected cycle or as long as 13 hours in advance.

Press Start. The Timer indicator will light up indicating the Timer is now activated and the colon between hours and minutes will flash on the display. The Timer will now begin to count down.

Tips for Breadmakers

■ *Measuring With Standard Measures*

Dry ingredients: Spoon into standard dry measuring cup until overflowing. Level off with straight-edged spatula.

Brown sugar or shortening: press firmly into standard dry measuring cup, or measuring spoon. Level off with straight-edged spatula.

Baking powder, baking soda, salt, spices, dry milk: fill your standard measuring spoon to overflowing. Level off with straight-edged spatula.

Liquid ingredients: place standard liquid measuring cup (8 fluid ounces) on level surface. Fill to specified mark and check measurement at eye level, top of liquid should be even with indicator line on the cup. Use standard measuring spoons for small amounts of liquid (see page 16 for equivalents chart).

Hints for Baking Delicious Homemade Breads

1. Use only fresh ingredients.
2. Yeast is the most important ingredient in bread baking. It causes the bread to rise. Too little yeast can result in improper rising. Too much yeast can cause over-rising and the dough could stick to the inside of the lid; or it could collapse during baking. In the breadmaker, yeast does not need "proofing" or preliminary fermentation. After each use, always close yeast container tightly and store in a cool, dry place.
3. Measure ingredients exactly.
4. Timer: When using the timer for delayed baking in warm weather conditions, you may need to reduce the yeast by $\frac{1}{4}$ to $\frac{1}{2}$ teaspoon, and use only half the amount of sugar called for in the recipes, to prevent over-rising.
5. For best results always allow bread to cool before slicing. To slice warm bread, use a sharp serrated-edge knife or electric knife.
6. After cooling bread completely, on a wire rack, store immediately in a tightly sealed plastic bag, plastic wrap or covered container. Do not store in the refrigerator, as this will cause the bread to dry out faster.
7. For longer storage, tightly seal bread in a moisture-proof wrap or bag, and store in freezer.

Ingredients Substitutions & Tips

Helpful Hints

- Cheese melts into liquid during baking. Allow for that by reducing liquid when adding cheese to a recipe. Do not *pack* grated cheese into the measuring cup. Lightly spoon into cup.
- Other liquids, such as beer, fruit juices or purees can be used as liquid in the bread.
- Fat, oil or shortening enrich flavor and help keep bread fresh longer. One can be substituted for another in the same amounts.
- Vegetable, canola, corn, peanut, soy or sunflower oil can be used. Unsaturated safflower oil is a good substitute in special health breads. Olive oil produces a softer crust than butter or margarine and is often used in pizza dough to tenderize and flavor the dough. Peanut oil keeps bread fresh longer.
- Milk and water are interchangeable in these recipes. Milk gives bread a velvety texture and adds nutrients. Breads made with water have a heavier, crispier crust and more "open" texture.
- Buttermilk is a good substitution for water or milk. It results in a light, high rising and tender bread. To offset the slight acidity, for every cup of buttermilk, add about $\frac{1}{4}$ teaspoon baking soda with the dry ingredients. Buttermilk also helps bread stay fresh longer.
- In place of granular (white) sugar, you can use brown sugar, honey, molasses or syrups. Hint: Before measuring honey or molasses, oil the measuring spoon or cup with cooking oil. The sticky syrup easily runs off the utensil.
- Add spices and herbs after flour, away from liquid to avoid altering the liquid/flour action.
- To make yeast breads last longer and be slightly higher, use water in which you've cooked potatoes and cooled to room temperature (70-80°F/21-27°C).
- If making bread in a cool room (under 65°F/18°C), use warmer water (100-110°F/38-43°C).
- There are several bread mixes available on the market which can also be used in your breadmaker. Follow the package instructions to make one loaf (1½ pounds).
- If you elect to use "light salt," it must contain both potassium chloride and sodium. Plain potassium chloride will not work.
- Vital gluten is the dried protein taken from the flour by

getting rid of the starch. It usually contains 75% protein and is a good dough enhancer or conditioner for breads that use yeast; especially for whole grain breads, or when using all-purpose flour in place of bread flour. As a guide, add 1 teaspoon vital gluten per cup of all-purpose flour and 1½ teaspoons per cup of whole grain flours in the recipe. Gluten flour is half vital gluten. It is expensive and

doesn't seem to enhance the bread as well as vital gluten. Vital gluten and gluten flour are usually available in health food stores and through the mail. See page 18 for sources.

- Vinegar or lemon juices are also acceptable dough enhancers. Generally, 1 teaspoon is added to rye bread to enable the rye flour to work with the bread flour for better structure.

Recipe Conversions

Most of your old family favorites as well as your new bread recipes can be prepared in the Regal Automatic Breadmaker. Here are some recipe conversion tips:

1. If your recipe yields two conventional loaves, cut the recipe in half to make one loaf. The breadmaker only makes one loaf at a time.
2. Do not exceed a total of 3 cups of flour. Use the recipes in this book as your guide when converting other recipes.
3. Always measure and add water or other liquids first, followed by the salt. Then add ingredients such as liquid sweetener, shortening, eggs etc. Finally, measure the dry ingredients into the bread pan in the order listed. Carefully place active dry yeast on top of dry ingredients, avoiding contact with the liquid and salt. If bread flour is not available in your area, use an all-purpose flour with a protein content of 14% or higher.
4. To substitute dry milk for fresh, use approximately 2 tablespoons dry milk plus 1 cup water for every cup of milk. Remember: fresh milk, cream, eggs, sour cream, etc., should not be used if using the timer on your breadmaker for delayed baking.

High Altitude Adjustments

At altitudes above 3,000 feet, flour tends to be drier and absorbs less liquid. Slightly more liquid or less flour may be required.

Dough rises faster at higher altitudes. Either sugar or yeast should be reduced slightly to prevent over-rising. See Table for guidelines.

Adjustment	Altitude		
	3,000 ft.	5,000 ft.	7,000 ft.
Reducing yeast. For each teaspoon, decrease by:	$\frac{1}{8}$ tsp.	$\frac{1}{8}$ - $\frac{1}{4}$ tsp.	$\frac{1}{4}$ tsp.
Reducing sugar. For each tablespoon, decrease by:	0-1 tsp.	0-2 tsp.	1-3 tsp.
Increasing liquid. For each cup, add:	1-2 tbsp.	2-4 tbsp.	3-4 tbsp.

NOTE: Since every recipe is different, some experimentation may be necessary to give you the desired result.

Equivalents								
Cup	=	Fluid Ounces	=	Tablespoons	=	Teaspoons	=	Milliliters
1	=	8	=	16	=	48	=	240
$\frac{7}{8}$	=	7	=	14	=	42	=	210
$(\frac{3}{4} + 2 \text{ Tbsp.})$								
$\frac{3}{4}$	=	6	=	12	=	36	=	180
$\frac{2}{3}$	=	$5\frac{1}{3}$	=	$10\frac{2}{3}$	=	32	=	158
$\frac{5}{8}$	=	5	=	10	=	30	=	150
$(\frac{1}{2} + 2 \text{ Tbsp.})$								
$\frac{1}{2}$	=	4	=	8	=	24	=	120
$\frac{1}{3}$	=	$2\frac{2}{3}$	=	$5\frac{1}{3}$	=	16	=	79
$\frac{1}{4}$	=	2	=	4	=	12	=	60
$\frac{1}{8}$	=	1	=	2	=	6	=	30
				1	=	3	=	15
				$\frac{1}{2}$	=	$1\frac{1}{2}$	=	7.5

Adjusting Recipes

Weather conditions, storage of ingredients, the temperature of ingredients and exactness of measuring ingredients can alter the size, shape or texture of the bread. Once you recognize the cause, adjustments can be made to compensate for most variables.

About 5 minutes after you press Start, lift the lid and check the contents of the bread pan. The ingredients will be mixing and starting to form a ball. The dough ball should have an even consistency, if not, an adjustment may be necessary.

When making bread by hand, the old fashioned way, the amount of flour is the control for adjusting. For example, most conventional bread recipes read: 6 to 7 cups flour. That 1 cup difference is the allowance to adjust the dough to the correct consistency. In the Regal Automatic Breadmaker, the flour adjustment can be made while the breadmaker is still mixing and kneading. Make the adjustment, 1 tablespoon at a time, during the first knead cycle while the machine is still kneading. If adjusted ingredient didn't completely mix into the dough, press Stop. To Restart, press Select button to reach desired setting, then press Start. If the baked loaf falls while baking, too much liquid was used. Next time, reduce liquid by one or two tablespoons. If the bread is small,

heavy or has a dense, moist texture, the dough was too dry. Next time, increase liquid.

Not all recipes will produce the same size loaf. When using whole grain flours, wheats and grains, the loaf will be shorter.

Dry Dough

If your breadmaker begins to "knock" while kneading, the dough is too dry. This may occur during cold months, simply add warm water (95-105°F/35-41°C), 1 tablespoon at a time, until the dough looks soft and smooth.

A dough that is dry will remain in a dense ball irregularly shaped instead of a soft ball. When baked, dry doughs will have an uneven or irregular top, possibly cracked, and the finished loaf will be short.

At the end of the kneading, the dough should be soft enough to very slowly relax toward the corners of the bread pan. As the dough rises, it fills into the corners.

When using the Dough cycle, the dough can be a little drier than when you bake bread in the machine. Because it will be removed and shaped by hand, the dough should be manageable, not sticky.

Moist Dough

If the dough contains too much liquid, it will look more like batter rather than dough. If too wet, the dough may rise okay, but then fall during the bake cycle. Or, it could over-rise and "mushroom" over the bread pan, or hit the lid.

If the dough looks too wet and sticky, add flour, 1 table-spoon at a time, until the dough forms a soft pliable ball.

Flour also absorbs moisture from the air, so you may need to adjust the liquid to compensate for humidity and altitude.

Sources (For Gluten, Whole Grains and other Ingredients)

Arrowhead Mills

Box 2059
Hereford, TX 79045
(806) 364-0730

Jaffe Brothers
P.O. Box 636
Valley Center, CA 92082
(619) 749-1133

Kenyon Corn Meal Company
Usquepaugh, RI 02892
(401) 783-4054

Walnut Acres
Denns Creek, PA 17862
(800) 433-3998

King Bakers Arthur Flour
P.O. Box 876
Norwich, VT 05055
(800) 777-4434

TAD Enterprises
9356 Pleasant
Tinley Park, IL 60477
(800) 438-6153

Bob's Red Mill
5209 S.E. International Way
Milwaukie, Oregon 97222
(503) 654-3215

Sources (For Gluten Free & Wheat Free Flours)

Ener-G Foods, Inc.
P.O. Box 84487
Seattle, WA 98124
(800) 331-5222


Garden Spot Distributors
438 White Oak Road
New Holland, PA 17551
(800) 829-5100

Operating Instructions


Before using your breadmaker for the first time, wash inside of bread pan and kneading blade with hot, soapy water; rinse and dry thoroughly. Using a damp dishcloth or sponge, wipe exterior of bread pan, inside of lid and exterior of breadmaker. Do not immerse bread pan or breadmaker in water.

To bake a loaf of bread using one of the standard bread settings (Basic, French, Rapid, or Whole Wheat) follow these instructions:


1. Open the cover and remove the bread pan. To remove the bread pan, grasp both sides of the handle and lift up on the handle.

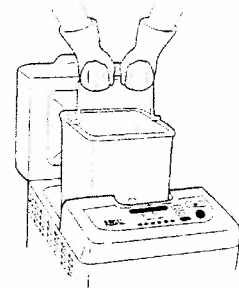

2. Remove any crumbs that may be on the drive shaft. Position the kneading blade on the drive shaft as shown. If the blade is not securely positioned, the ingredients will not be mixed or kneaded properly.

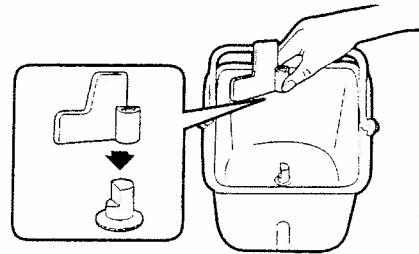


3. All ingredients should be at room temperature (70-80°F/21-27°C). Always measure ingredients into bread pan in the order listed in the recipe.
 - A. Always measure and add the water or other liquids, first, except where otherwise directed.
 - B. Then, add salt, flour, and other dry ingredients, except yeast.
 - C. Add yeast last to keep it dormant. It is very important to keep the yeast dry and away from the salt, especially when using the timer. Do not mix. See illustrations below.

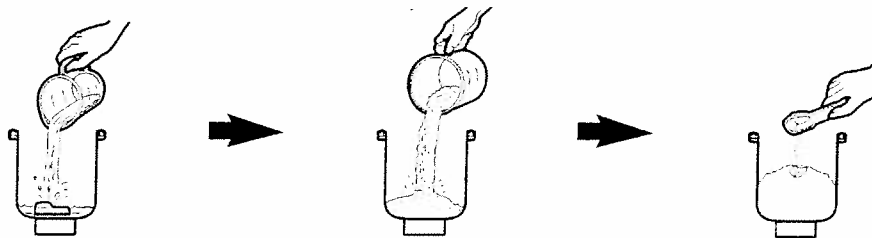


When using the timer (see page 12), make a small "well" in the mound of flour and pour the dry yeast into it. Do not let the yeast touch the water or salt as the dough may not rise properly. The water will activate the yeast before the ingredients are properly mixed and kneaded.

NOTE: When the room temperature is under 65°F/18°C, use lukewarm water (about 100-110°F/38-43°C) to assist the yeast fermentation.

4. Wipe water or other spills from the outside of the bread pan. Place the bread pan into the oven chamber and press down to lock securely in position. Make sure the bread pan has been set securely in the oven chamber to ensure proper mixing and kneading.

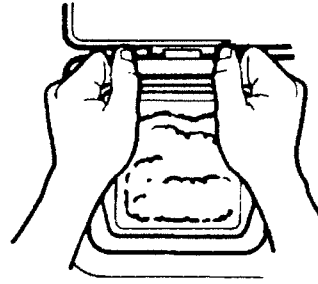

5. Close the cover.
6. Plug into outlet. The numbers "0:00" will appear on the display.

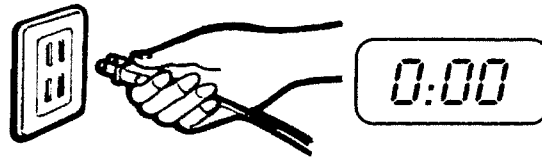


7. To choose the proper setting, press the Select button to reach the desired setting. Each time the Select button is pressed the setting will advance and the selected setting light will glow.
8. The breadmaker is automatically preset to bake bread with a medium crust. To choose a darker or lighter crust, press Baking Control until the setting you want lights up.
9. Press Start. The time on the display will begin counting down the minutes from the amount of time required for the setting you have selected. The setting you have chosen will remain lit during operation. When baking is finished, the signal will sound and the display will read "0:00".

Caution: Steam will escape when cover is opened. Use a pot holder or oven mitts to open cover to avoid steam burns.


10. When the signal stops, press the Stop button and carefully open the lid of the breadmaker. To remove the bread pan (with potholders or oven mitts), lift the handle and grasp with both hands and pull pan out of breadmaker.

Place bread pan on heat-proof surface.

11. Remove bread from the bread pan as soon as possible after baking. Always press Stop first, to turn the machine off, then remove bread. The Warming feature will keep bread warm for one hour after baking and will gradually reduce temperature. However, bread is best when removed right away.

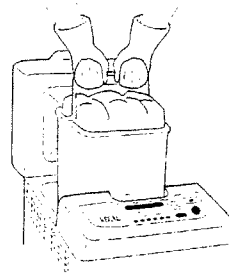


Using potholders or oven mitts, hold the bread pan upside down and gently shake it to remove the bread. The surface of the bread pan is slippery, so be sure you have a firm grip.

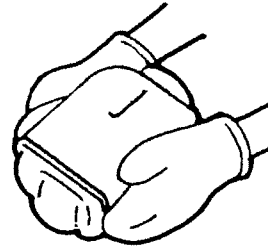

If the bread cannot be easily removed, using an oven mitt or potholder, turn the drive shaft on the bottom of the bread pan in both directions to loosen the bread. **Caution:** The drive shaft will be hot.

Drive Shaft

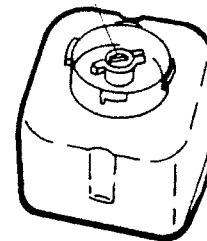


If the kneading blade comes out with the bread, use a plastic or wooden utensil to remove it from the bread to avoid scratching the nonstick surface.

Place bread on a wire rack to cool before slicing.

CAUTION: The kneading blade will be hot! Do not attempt to remove it with bare hands.

12. Remove plug from outlet.
When removing the plug, always grasp the plug itself and do not pull on the cord.

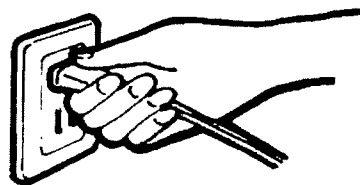

To Clean Breadmaker


Unplug the breadmaker and allow it to cool before cleaning.

NEVER use scouring powder, steel wool pads, or other abrasive materials. And, NEVER use any chemicals such as benzine, paint thinner, alcohol, etc.

Body

DO NOT IMMERSE
BREADMAKER IN WATER

- Clean your breadmaker, inside and outside, by wiping it with a soft cloth using water and a mild detergent.
- After each use remove crumbs from the baking chamber with a damp cloth.

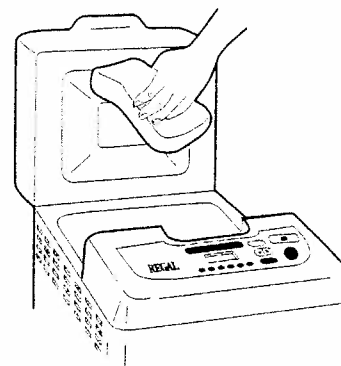


Bread Pan/Kneading Blade

- Wash inside of bread pan and kneading blade with warm, soapy water; rinse and dry thoroughly. Do not immerse base of bread pan in water as this could cause the drive shaft to malfunction.

DO NOT USE METAL OBJECTS TO
CLEAN THE BREAD PAN.

- As with any of the non-stick cooking utensils in your kitchen, treat the bread pan gently. Do not use metal objects or steel wool, etc., to clean it.
- If the kneading blade has stuck to the drive shaft, pour warm water in the pan and let stand 15-20 minutes to loosen it.

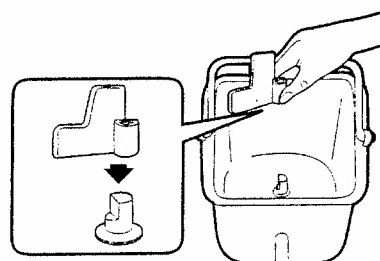

DO NOT USE EXCESSIVE FORCE.

- If the hole of the kneading blade is filled with dough, clean it with a wooden toothpick or small brush.

NOTE: The coating inside the bread pan may change color after repeated use. This is caused by heat, moisture and steam, and will not affect the performance of the unit, or the release properties.

Storage

- Cool breadmaker completely. Wipe off crumbs and moisture before storing.

How To Use Timer

1. Measure ingredients into bread pan in the sequence specified in the recipe.
2. Select desired setting.
3. Press Baking Control to choose desired crust setting (if other than medium).



TIMER SET



4. To set Timer, press > button until the desired number of hours & minutes appears on the display. The time advances in 10 minute increments. If either button (< or >) is held down, they will advance quickly. If you go beyond the desired time, simply press the < button to back up to desired time.

Example:

If the time is now 8:00 PM and you want the bread to be ready at 7:00 AM, that is 11 hours from now, so press the > until 11:00 appears on the display, press Start.

5. Press Start. The timer light on the panel will glow, the colon on the display will flash and time will begin counting down. The breadmaker will automatically start mixing at precisely the right moment and you will have hot, baked bread at the selected time. **If you forget to press Start, the timer will not work.**

Important:

- Do not use fresh milk, eggs, fruit or vegetable purees when using the timer. They could spoil.
- Always add carefully-measured ingredients in the same sequence listed in the recipe: liquids, salt, dry ingredients, and yeast last.
- When using the timer cycle for more than a couple of hours, during times of high humidity or hot weather, cut the liquid by one or two tablespoons to reduce the possibility of over-rising. Salt may be increased by $\frac{1}{8}$ to $\frac{1}{4}$ teaspoon to keep the dough from rising too quickly and falling. Sugar can also be reduced by up to half the amount called for in the recipe. Note: The yeast must be kept away from the liquid and the salt.

Bread Recipes

Important

Weather conditions such as temperature, altitude or accuracy in measuring can affect the outcome of a loaf. In order to allow you to compensate we have created each recipe with a liquid range.

We recommend you start with the smaller amount of liquid. Allow unit to mix for a few minutes before checking the dough consistency. If the dough is dense, irregularly shaped or the unit is making a knocking noise, add 1 teaspoon of water at a time until the dough is soft and pliable.

Basic White (from video)

All ingredients at room temperature (70-80°F/21-27°C)

(1 pound recipe)

6-7 ounces	Water
1 teaspoon	Salt
1 tablespoon	Butter or Margarine
2½ cups	Bread Flour
1½ tablespoons	Dry Milk
2½ teaspoons	Sugar
1¾ teaspoons	Active Dry Yeast

(1.5 pound recipe)

8-9 ounces
1½ teaspoons
2 tablespoons
3 cups
2 tablespoons
1 tablespoon
2½ teaspoons

Select Basic or Rapid setting. Press Start. When the unit signals and display reads 0:00, press Stop and remove bread.



Old Fashioned

(1.5 pound recipe)

All ingredients at room temperature (70-80°F/21-27°C)

Milk	6-7 ounces
Salt	1¼ teaspoons
Egg	1
Butter or Margarine	1 tablespoon
Bread Flour	3 cups
Sugar	1 tablespoon
Active Dry Yeast	2 teaspoons

Select Basic or Rapid setting. Press Start. When the unit signals and the display reads 0:00, press Stop and remove bread.



Country White

(1.5 pound recipe)

All ingredients at room temperature (70-80°F/21-27°C)

Milk	8-9 ounces
Salt	1½ teaspoons
Butter or Margarine	2 tablespoons
Bread Flour	3 cups
Sugar	3 tablespoons
Active Dry Yeast	2 teaspoons

Select Basic or Rapid setting. Press Start. When the unit signals and the display reads 0:00, press Stop and remove bread.



Oatmeal

All ingredients at room temperature (70-80°F/21-27°C)

(1 pound recipe)

6-7 ounces
1 teaspoon
1½ tablespoons
1 tablespoon
⅓ cup
2 cups
2 teaspoons

Water
Salt
Honey
Butter or Margarine
Quick Cook Oats
Bread Flour
Active Dry Yeast

(1.5 pound recipe)

8-9 ounces
1¼ teaspoons
2 tablespoons
1½ tablespoons
⅔ cup
2½ cups
2¼ teaspoons

Select Basic setting. Press Start. When unit signals and the display reads 0:00, press Stop and remove the bread.



Oat Bran

All ingredients at room temperature (70-80°F/21-27°C)

(1 pound recipe)

6-7 ounces
1 teaspoon
1 tablespoons
1½ tablespoons
¼ cup
2 cups
1½ tablespoons
1½ teaspoons

Water
Salt
Butter or Margarine
Honey
Oat Bran
Bread Flour
Dry Milk
Active Dry Yeast

(1.5 pound recipe)

8-9 ounces
1¼ teaspoons
1½ tablespoons
2 tablespoons
½ cup
2½ cups
2 tablespoons
2¼ teaspoons

Select Basic setting. Press Start. When unit signals and the display reads 0:00, press Stop and remove the bread.

Raisin

All ingredients at room temperature (70-80°F/21-27°C)

(1 pound recipe)

6-7 ounces

1 teaspoon

1 tablespoon

2¼ cups

1½ tablespoons

1 tablespoon

¾ teaspoon

1½ teaspoons

¾ cup

⅓ cup

Water

Salt

Butter or Margarine

Bread Flour

Sugar

Dry Milk

Cinnamon

Active Dry Yeast

Raisins

Chopped Walnuts

(1.5 pound recipe)

8-9 ounces

1½ teaspoons

1½ tablespoons

3 cups

2 tablespoons

1½ tablespoons

1 teaspoon

2 teaspoons

1 cup

½ cup

Select Basic setting. Press Start. When unit signals and the display reads 2:00, slowly add raisins a few at a time. When unit signals again and the display reads 0:00, press Stop and remove the bread.

Cottage Cheese Chive

(1.5 pound recipe)

All ingredients at room temperature (70-80°F/21-27°C)

Cottage Cheese

¾ cup

Egg

1

Salt

1 teaspoon

Butter or Margarine

1 tablespoon

Water

⅓ cup

Bread Flour

2½ cups

Dried Chives

2 tablespoons

Sugar

1 tablespoon

Active Dry Yeast

1½ teaspoons

Select Basic setting. Press Start. When the unit signals and the display reads 0:00, press Stop and remove bread.

Rye

(1.5 pound recipe)

All ingredients at room temperature (70-80°F/21-27°C)

Water	8-9 ounces
Salt	1 teaspoon
Vegetable Oil	1 tablespoon
Honey	1½ tablespoons
White Vinegar	½ teaspoon
Bread Flour	2 cups
Rye Flour	1 cup
Powdered Buttermilk	1½ tablespoons
Caraway	1 tablespoon
Vital Wheat Gluten	1½ teaspoons
Active Dry Yeast	1¾ teaspoons

Select Basic or French setting. Press Start. When unit signals and the display reads 0:00, press Stop and remove the bread.

French

(1.5 pound recipe)

All ingredients at room temperature (70-80°F/21-27°C)

Water	8-9 ounces
Salt	1½ teaspoons
Vegetable Oil	2 tablespoons
Bread Flour	3 cups
Sugar	2 teaspoons
Active Dry Yeast	2 teaspoons

Select French setting. Press Start. When unit signals and the display reads 0:00, press Stop and remove the bread.

Honey French

(1.5 pound recipe)

All ingredients at room temperature (70-80°F/21-27°C)

Water	8-9 ounces
Salt	1 teaspoon
Olive Oil	2 teaspoons
Honey	1 tablespoon
Bread Flour	3 cups
Active Dry Yeast	2 teaspoons

Select French setting. Press Start. When unit signals and the display reads 0:00, press Stop and remove the bread.

Italian

(1.5 pound recipe)

All ingredients at room temperature (70-80°F/21-27°C)

Water	8-9 ounces
Salt	1¼ teaspoons
Vegetable Oil	1½ teaspoons
Bread Flour	3 cups
Sugar	1 teaspoon
Active Dry Yeast	2 teaspoons

Select French setting. Press Start. When unit signals and the display reads 0:00, press Stop and remove the bread.

Cracked Wheat

(1.5 pound recipe)

All ingredients at room temperature (70-80°F/21-27°C)

Water	8-9 ounces
Salt	1 teaspoon
Butter or Margarine	2 tablespoons
Honey	1½ tablespoons
Bread Flour	2 cups
Whole Wheat Flour	1 cup
Cracked Wheat	⅓ cup
Active Dry Yeast	2 teaspoons

Select Basic or Whole Wheat setting. Press Start. When the unit signals and the display reads 0:00, press Stop and remove the bread.

Honey Wheat

(1.5 pound recipe)

All ingredients at room temperature (70-80°F/21-27°C)

Wheat Flakes	¾ cup
Wheat Bran	1½ tablespoons
Water	7-8 ounces
Salt	1 teaspoon
Honey	2 tablespoons
Butter or Margarine	1 tablespoon
Bread Flour	2½ cups
Active Dry Yeast	2 teaspoons

Select Basic or Whole Wheat setting. Press Start. When the unit signals and the display reads 0:00, press Stop and remove the bread.

Whole Wheat II

(1.5 pound recipe)

All ingredients at room temperature (70-80°F/21-27°C)

Water	8-9 ounces
Salt	1½ teaspoons
Butter or Margarine	1½ tablespoons
Bread Flour	2⅓ cups
Whole Wheat Flour	⅔ cup
Sugar	2 tablespoons
Dry Milk	1½ tablespoons
Active Dry Yeast	2 teaspoons

Select Basic or Whole Wheat setting. Press Start. When the unit signals and the display reads 0:00, press Stop and remove the bread.

100% Whole Wheat

(1.5 pound recipe)


All ingredients at room temperature (70-80°F/21-27°C)

Water	8-9 ounces
Salt	1½ teaspoons
Vegetable Oil	1 tablespoon
Honey	2 tablespoons
Molasses	1 tablespoon
Whole Wheat Flour	3 cups
Vital Wheat Gluten	1 tablespoon
Active Dry Yeast	1¼ teaspoons


Select Whole Wheat setting. Press Start. When the unit signals and the display reads 0:00, press Stop and remove the bread.

Using The Automatic Dough Setting


1. Open the cover and remove the bread pan. To remove bread pan, lift handle, grasp both sides of it and pull up.

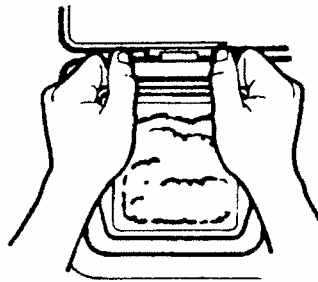


2. Remove any crumbs that may be on the drive shaft. Position the kneading blade on the drive shaft as shown. **Important:** If the blade is not positioned securely, the ingredients will not be mixed or kneaded properly.

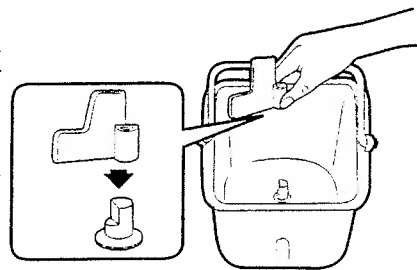

3. Measure room-temperature ingredients into bread pan. Add the ingredients in the order listed in the recipe, with the yeast last, as shown below.

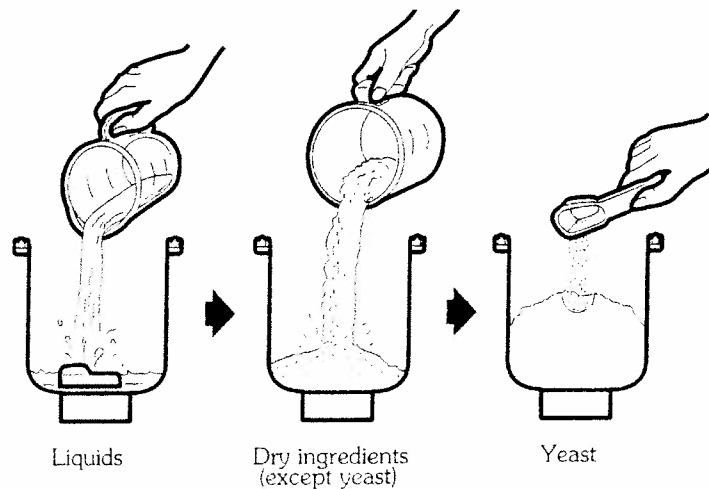

4. Wipe water or other remains from the outside of the bread pan.
Place the bread pan in the bread-maker. To lock into position, firmly press down until bread pan snaps into position. **Important:** Make sure the bread pan has been set securely in the breadmaker to ensure proper mixing and kneading.

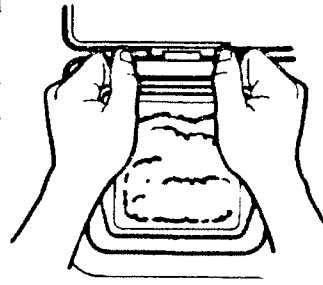

5. Close the cover.
6. Plug into outlet.
The numbers "0:00" will appear on display.



7. Press Select button until Dough setting appears on the display. Each time the button is pressed you will hear a beep and the cycle will advance.
8. Press Start. The display will read "1:20". The display will begin counting down the minutes.

When dough is ready (1 hour, 20 minutes), the signal will sound and the display will read "0:00".

9. When using the Dough setting the bread pan is not hot. When the signal sounds, press Stop button and open the cover.

To remove the bread pan, lift handle and grasp with both hands. Pull pan out of breadmaker.

Prepare Dough for Baking

1. Lightly sprinkle all-purpose flour onto a pastry mat or board. Using a rubber spatula or wooden spoon, remove dough from bread pan and place on lightly floured surface. Knead by hand 2 or 3 times to release the air. If dough is easy to handle without flour, shape on a lightly oiled, clean countertop.
2. Shape dough into your favorite rolls, coffee cake, etc. Cover dough with a clean kitchen towel and let rise until almost doubled in size, about 1 hour.
3. Bake in preheated (350°F/177°C) oven 30-35 minutes, until golden brown. Remove from pans, then cool on a wire rack or serve warm.

Crust Treatments (use only with Dough Setting)

After the rolls rise, just before baking, gently apply desired glaze with a pastry brush if desired. Bake as directed in recipe.

- For a shiny golden crust, use Egg Glaze or Egg Yolk Glaze.
- For a shiny chewy crust, use Egg White Glaze (crust will be lighter colored).

Egg Glaze

Mix 1 slightly
beaten egg
with 1 tablespoon
water or milk.

Egg Yolk Glaze

Mix 1 slightly
beaten egg yolk
with 1 tablespoon
water or milk.

Egg White Glaze

Mix 1 slightly
beaten egg white
with 1 tablespoon
water.

NOTE: To keep unused egg yolk fresh for several days, cover with cold water and store in refrigerator in a covered container.

Powdered Sugar Glaze
(for Coffee Cakes and Sweet Rolls)

- 1 cup sifted powdered sugar
- 1 teaspoon softened butter or margarine
- 1 or 2 tablespoons water or milk
- ½ teaspoon vanilla

In small bowl, blend ingredients until smooth. Spread or drizzle on slightly warm coffee cake, cinnamon rolls, etc.

Hint: To reheat yeast rolls, place in a clean brown paper bag, fold to close opening. Sprinkle outside of bag with water. Place the bag of rolls in a 325°F/163°C oven for about 10 minutes, or until heated through. Or, place rolls on a large sheet of foil. Sprinkle with a few drops of water. Wrap securely and heat in 325°F/163°C oven, 10-12 minutes.

Rising

To reduce rising time of dough prepared in your breadmaker

- Preheat conventional oven to 200°F/93°C for 5 minutes, then turn off oven. Shape dough, place on baking utensil as directed and cover with a clean kitchen towel. Place dough in oven until doubled in size. This will reduce rising time by about one-half.
- If television is in use, stand pan of dough on top of TV to rise. It is a good source of heat and, if you are watching a program, you will not forget about the dough.
- Recipes using whole grain or unrefined flours may not rise as much as those using white bread flour (these contain less gluten). These heavier breads may fall slightly in the center. This is normal and will not affect the flavor. Wheat gluten can be added to improve the shape and volume of bread made with low gluten flours (see pages 14 & 15).

Freezing

For best results, store unbaked yeast dough in your freezer for no more than two weeks.

To freeze unbaked bread dough

- Shape loaves and wrap in plastic wrap or foil. When you shape the loaf, be sure it fits easily into the baking pan as it will spread a little before freezing. Place wrapped loaf on a flat surface in your freezer so it will keep its shape until frozen.
- To bake: remove dough from freezer, unwrap, and place in greased loaf pan (size specified in recipe). Cover, let thaw, and rise in a warm place until almost doubled in size, about 6 hours for a standard size loaf. Or, thaw dough in refrigerator overnight, then unwrap, place dough in pan, and let rise in a warm place for approximately 2 hours.

To freeze unbaked rolls

- Shape rolls and place on greased baking sheets, or in muffin pans as indicated in recipe. Cover rolls with plastic wrap or foil and place in freezer. Rolls shaped in muffin pans are best frozen and stored in the pans. Rolls shaped on baking sheets should be removed as soon as they are completely frozen and placed in freezer bags or wrapped securely. Label each package with date and quantity.
- To bake: remove rolls from freezer about 2 hours before baking. If not already in a pan, place 1 inch apart on greased baking pan. Cover pan loosely with a clean cloth and set in a warm place to thaw and rise until almost doubled in size (approximately 1½ to 2 hours). Bake as directed in recipe.
- You can also wrap and freeze unshaped dough right after the first rise and after you have punched it down. To use, thaw dough about 3 hours at room temperature, or overnight in the refrigerator; then shape, cover, let rise, and bake as directed in recipe.

Storing

Keeping your bread fresh

- There are no preservatives in your homemade bread, so store cooled loaf in a tightly sealed plastic bag. If desired, enclose a stalk of celery in the bag to keep bread fresh longer. Do not store in the refrigerator as this causes bread to dry out faster.
- Water in which potatoes have been cooked is an excellent variation for other liquid in the recipe. This will aid in keeping the bread fresh longer.

Bread Pretzels

All ingredients at room temperature (70-80°F/21-27°C)

Water	6 ounces
Salt	¼ teaspoon
Bread Flour	2 cups
Sugar	½ teaspoon
Active Dry Yeast	1½ teaspoons
Egg (slightly beaten)	1
Coarse Salt	1-2 tablespoons

Measure all ingredients into bread pan, except egg and coarse salt. Select Dough setting. Press Start. When the unit signals and display reads 0:00, press Stop and remove dough.

Preheat oven to 450°F/232°C. Divide dough into 12 pieces. Roll each into 8-inch rope. Form into pretzel shape or leave in a stick shape. Place on a greased cookie sheet, brush each with beaten egg. Sprinkle with coarse salt. Bake in preheated oven for 12-15 minutes. (Makes 12 pretzels.)

Bran Buns

All ingredients at room temperature (70-80°F/21-27°C)

Water	6 ounces
Salt	¾ teaspoon
Butter or Margarine	⅓ cup
Egg	1
Bread Flour	2½ cups
Wheat Bran	⅓ cup
Sugar	3 tablespoons
Active Dry Yeast	2¼ teaspoons

Measure all ingredients into the bread pan. Select Dough setting. Press Start. When the unit signals and the display reads 0:00, press Stop and remove the dough. Divide dough and shape as desired. (Makes 12 buns or 24 rolls.)

Addie's Coffee Cake

All ingredients at room temperature (70-80°F/21-27°C)

Milk	¾ cup
Salt	1 teaspoon
Egg Yolk	1
Butter or Margarine	1 tablespoon
Bread Flour	2¼ cups
Sugar	¼ cup
Active Dry Yeast	2 teaspoons

Measure all ingredients into the bread pan. Select Dough setting. Press Start. When unit signals and display reads 0:00, press Stop and remove dough. Pat dough into greased 9-inch round, or 5 x 7-inch oblong cake pan. Add topping.

Topping

Butter, melted	2 tablespoons
Sugar	½ cup
Ground Cinnamon	1 teaspoon
Chopped Pecans	½ cup
Powdered Sugar Glaze (page 35), optional.	

Drizzle butter over dough. In small bowl, mix sugar, cinnamon and nuts; sprinkle onto butter. Cover; let rise in warm place about 30 minutes. Bake in preheated oven (350°F/177°C) 20-25 minutes, until golden brown. Cool 10 minutes in pan on rack. Drizzle with powdered sugar glaze if desired (see page 35.) (Makes 12 servings.)



Reuben Bake

All ingredients at room temperature (70-80°F/21-27°C)

Water	7-8 ounces
Salt	$\frac{3}{4}$ teaspoon
Oil	2 tablespoons
Molasses	1 tablespoon
Rye Flour	1 cup
Bread Flour	1 cup
Caraway Seed	2 teaspoons
Dried Minced Onion	2 teaspoons
Active Dry Yeast	2 teaspoons

Measure all ingredients into the bread pan. Select Dough setting. Press Start. When the unit signals and display reads 0:00, press Stop and remove dough. Pat dough into greased 9-inch round cake pan. Add topping.

Topping

Mayonnaise	$\frac{1}{4}$ cup
Prepared Mustard	1 $\frac{1}{2}$ tablespoons
Prepared Horseradish	2 teaspoons
Corned Beef, chopped	2 $\frac{1}{2}$ to 3 ounces
Sauerkraut, well drained	1 can (8 ounces)
Shredded Swiss Cheese	1 cup (4 ounces)

In small bowl, combine mayonnaise, mustard, horseradish; spread over dough. Cover with waxed paper and let stand 30 minutes. Preheat oven to 350°F/177°C. Layer corned beef and sauerkraut on dough. Top with cheese. Bake 30-35 minutes. Cut into wedges to serve.

4-6 servings.

Whole Wheat Pizza Crust

All ingredients at room temperature (70-80°F/21-27°C)

Water	7-8 ounces
Salt	¾ teaspoon
Olive or Vegetable Oil	1 tablespoon
Honey	1 tablespoon
Whole Wheat Flour	2¼ cups
Wheat Germ	¼ cup
Active Dry Yeast	2¼ teaspoons

Measure all ingredients into the bread pan. Select Dough setting. Press Start. When the unit signals and display reads 0:00, press Stop and remove dough.

Pat dough into 12 x 15-inch jelly roll pan or greased 12-inch round pizza pan. Let stand for 10 minutes. Preheat oven to 400°F/204°C. Spread pizza sauce over dough, add desired toppings (see page 42) and bake 15-20 minutes, or until crust is golden brown.

Pizza Crust

All ingredients at room temperature (70-80°F/21-27°C)

Water	7-8 ounces
Salt	¾ teaspoon
Olive Oil	2 tablespoons
All-Purpose Flour	2½ cups
Sugar	2 teaspoons
Active Dry Yeast	2 teaspoons

Measure all ingredients into the bread pan. Select Dough setting. Press Start. When the unit signals and display reads 0:00, press Stop and remove dough.

Pat dough into 12 x 15-inch jelly roll pan or greased 12-inch round pizza pan. Let stand for 10 minutes. Preheat oven to 400°F/204°C. Spread pizza sauce over dough, add desired toppings (see page 42) and bake 15-20 minutes, or until crust is golden brown.

Pizza Toppings

Prepared Pizza Sauce	1 cup
Sliced Pepperoni	1 pkg.
Bulk Pork Sausage browned and drained	½ pound
Mushroom Stems & Pieces	1 can (drained)
Chopped Onions	⅓ cup
Chopped Green Peppers	1 cup
Shredded Mozzarella Cheese	1 cup

Cinnamon Rolls

All ingredients at room temperature (70-80°F/21-27°C)

Old Fashioned Bread (page 25)	1 recipe
Butter or Margarine	2 tablespoons
Sugar	¼ cup
Ground Cinnamon	2 teaspoons
Powdered Sugar Glaze	1 recipe (page 35)

Measure all ingredients into the bread pan except the Powdered Sugar Glaze. Select Dough setting. Press Start. When unit signals and display reads 0:00, press Stop and remove dough. On a lightly floured surface, roll dough into rectangle (15 x 9-inches) spread soft butter on dough. Mix sugar and cinnamon; sprinkle over butter. Roll up tightly, beginning at 15-inch side. Pinch edges to seal. Stretch roll to make even. Cut nine 1½-inch slices. Arrange in greased 9 x 9 x 2-inch square pan, spacing evenly. Cover; let rise until double in size; about 40 minutes. Preheat oven to 375°F/191°C. Bake 25-30 minutes, or until golden brown. Cool on wire rack for 10 minutes. Top warm rolls with glaze. (Makes 9 rolls.)

Focaccia

All ingredients at room temperature (70-80°F/21-27°C)

Water	8-9 ounces
Olive Oil	3 tablespoons (for dough) 1½ tablespoons (for topping)
Salt	1 teaspoon
Garlic	1-2 cloves (crushed)
Dried Rosemary	1½ teaspoons
Bread Flour	3 cups
Sun dried tomatoes	½ cup (chopped)
Parmesan cheese	½ cup
Yeast	1 5/4 teaspoons

Measure all ingredients into bread pan except 1½ tablespoons olive oil, tomatoes and parmesan cheese. Select Dough setting. Press Start. When unit signals and the display reads 0:00, press Stop and remove the dough. Pat dough into a greased 9 x 13 inch pan. Cover; let rise for 30 minutes. With the handle of a wooden spoon make indentations in dough - about 1 inch apart. Brush dough with 1½ tablespoon olive oil, sprinkle with tomatoes and parmesan cheese. Preheat oven to 400°F/204°C. Bake 15-20 minutes or until edges are golden brown. Let cool, cut into square pieces to serve.

Making Quick Breads

Unlike yeast breads, quick breads do not use yeast as the rising agent. Therefore, the knead and rise cycles have been omitted from the Quick Bread setting. Instead, quick breads use baking powder or baking soda along with steam to act as a leavening agent.

Test your bread to see if it is done by inserting a wooden pick into the bread. If the pick comes out clean, the bread is done. If not, the bread needs to be baked a little longer. To extend the baking time reselect the Bake setting. Press Start. Let bread bake 5-10 more minutes, then test again to see if bread is done.

When bread is finished, let it cool in the bread pan for 10 minutes. Remove bread and cool on a wire rack.

Cranberry Nut

All ingredients at room temperature (70-80°F/21-27°C)

Orange Juice	2 ounces
Egg (slightly beaten)	1
Butter or Margarine	2 tablespoons
Coarsely Chopped Cranberries	1 cup
Chopped Walnuts	½ cup
Grated Orange Peel	1 tablespoon
All-Purpose Flour	2 cups
Sugar	1 cup
Baking Powder	1½ teaspoons
Salt	1 teaspoon
Baking Soda	½ teaspoon

Measure orange juice, egg, butter, cranberries, and nuts into the bread pan; set aside. In medium mixing bowl, combine remaining ingredients and mix thoroughly. Add mixture to bread pan. Select Basic setting. Press Start. Allow ingredients to mix 1-3 minutes until blended. Press Stop. With rubber spatula, scrape sides and corners of bread pan. Restart Basic setting, allow to mix 2 more minutes. Press Stop. Select Bake. Press Start. When the unit signals and the display reads 0:00, press Stop. Test for doneness. To extend the time, see page 43. Let bread cool 10 minutes before removing from bread pan.

Banana Nut

All ingredients at room temperature (70-80°F/21-27°C)

Eggs (slightly beaten)	2
Bananas, Medium (mashed)	2
Butter or Margarine	⅓ cup
Milk	2 tablespoons
Chopped Nuts	½ cup
All-Purpose Flour	2 cups
Sugar	⅔ cup
Baking Powder	1¼ teaspoons
Salt	1 teaspoon
Baking Soda	½ teaspoon

Measure eggs, bananas, butter, milk and nuts into bread pan. In a medium mixing bowl, combine remaining dry ingredients. Mix well and add to the bread pan. Select Basic setting. Press Start. Allow to mix 1-3 minutes until blended. Press Stop. With rubber spatula, scrape sides and corners of bread pan. Restart Basic setting, allow to mix 2 more minutes, press Stop. Select Bake. Press Start. When the unit signals and the display reads 0:00, press Stop. Test for doneness. To extend the bake time, see page 43. Let bread cool 10 minutes before removing from bread pan.

Making Pasta

Making pasta is easy in the Regal Breadmaker. Just add the ingredients into the bread pan in the order listed, select Dough setting and press Start. When the dough is ready, shape as desired either by hand or with a pasta machine. Cook pasta in boiling water (add salt if desired) until it reaches desired tenderness. Experimentation is encouraged. Try adding a teaspoon of dried or fresh herbs. If using your own recipe, do not exceed a total of 3 cups of flour.

Basic Pasta

All ingredients at room temperature (70-80°F/21-27°C)

All-Purpose Flour	2 cups
Semolina Flour	1 cup
Salt	1 teaspoon
Olive Oil	1 tablespoon
Water	6 ounces

Select Dough setting. Press Start. Allow to mix 2-3 minutes. Scrape sides with spatula if necessary. Press Stop. Remove dough and roll out on a lightly floured surface. Roll to 1/8 inch thickness. Dust with flour if dough is sticky. Cut into 1/8 inch strips for narrow noodles or 1/4 inch for medium noodles. Cook noodles in a large pot of boiling water for 15-20 minutes or until tender; drain in a colander.

Egg Pasta

All ingredients at room temperature (70-80°F/21-27°C)

All-Purpose Flour	2 cups
Semolina Flour	1 cup
Salt	1 teaspoon
Olive Oil	1 teaspoon
Eggs - large	4
Water	2 tablespoons

Select Dough setting. Press Start. Allow to mix 2-3 minutes. Scrape sides with spatula if necessary. Press Stop. Remove dough and roll out to 1/8 inch thickness. Dust with flour if dough is sticky. Cut into 1/8 inch strips for narrow noodles or 1/4 inch for medium noodles. Cook noodles in a large pot of boiling water for 15-20 minutes or until tender; drain in a colander.

Making Jam

Homemade jam is quick and easy to make in the Regal Breadmaker; even if you've never made it before.

1. Slice fresh, ripe fruit (do not exceed 4 cups fruit). Peel fruits with tough skins such as apples, pears or peaches.
2. Add $\frac{1}{2}$ - 1 cup sugar per cup of fruit depending on your preference and one package fruit pectin (powder or liquid).
3. Select Dough setting, press Start. Run just long enough to mix ingredients (about 5 minutes). Press Stop. Then select Bake and press Start.
4. When unit signals and display reads 0:00, press Stop. Spoon jam into containers and chill for one hour to complete the jelling process.
5. Store jam in the refrigerator for up to one month or in freezer for up to three months.

Strawberry Jam

Not for Timer

Fresh Strawberries (hulled)	1 quart
Sugar	2-3 cups
Lemon Juice	2-3 tablespoons
Fruit Pectin (powdered)	1 package (1 $\frac{3}{4}$ ounce)

Combine ingredients into bread pan. Select Dough setting. Press Start. Allow to mix 3-5 minutes. Press Stop. (Scrape sides with spatula if necessary). Select Bake setting. Press Start. When unit signals and display reads 0:00, Press Stop. Using hot pads, remove bread pan. Spoon jam into refrigerator or freezer containers. (Makes about 3 cups.)

Orange Marmalade

Not for Timer

Oranges (large)	3
Lemon	1
Sugar	2½ cups
Fruit Pectin (powdered)	1 package (1¾ ounce)

Peel oranges and lemon. Slice fruit into ½ inch pieces. Combine all ingredients into bread pan. Select Dough setting. Press Start. Allow to mix 3-5 minutes. Press Stop. (Scrape sides with spatula if necessary). Select Bake setting. Press Start. When unit signals and display reads 0:00, press Stop. Using hot pads, remove bread pan. Spoon jam into containers and refrigerate for 1 hour to set. (Makes about 3 cups.)

Frozen Berry Jam

Not for Timer

Frozen Berries (thawed) (strawberries & raspberries are ideal)	1 package (10-12 ounces)
Lemon Juice	1 tablespoon
Sugar	1¾ cups
Fruit Pectin (liquid)	1 pouch (6 ounces)

Combine all ingredients. Select Dough setting. Press Start. Allow to mix 3-5 minutes. Press Stop. (Scrape sides with spatula if necessary). Select Bake setting. Press Start. When unit signals and display reads 0:00, press Stop. Using hot pads, remove bread pan. Spoon jam into containers and refrigerate for 1 hour to set.

Making Rice

Making rice requires very minimal effort using your breadmaker.
(Note: not for use with instant rice.)

For Brown or White Rice

1. Measure ingredients as directed on the rice package into the bread pan.
2. Position bread pan into breadmaker. Select Bake and press Start.
3. Rice is ready in 50 minutes (disregard cooking times on rice package). When the unit signals and display reads 0:00, press Stop and remove bread pan.

For Wild Rice

1. Using the amounts specified on the rice package, bring water and salt to a full boil in a sauce pan.
2. Measure all other ingredients into the bread pan then add boiling water.
3. Position bread pan into breadmaker. Select Bake and press Start.
4. When the unit signals and display reads 0:00, press Stop and remove bread pan. If water has not absorbed and rice is still firm, restart the Bake cycle and cook for another 20-30 minutes until liquid is absorbed and rice is tender.